



frequently asked questions

OBTAINING HYDRA HERCULES SOFTWARE VERSIONS

Following the procedure detailed below will allow you to obtain the software versions of the various system components. The procedure is as follows:

1. Perform a 'software' power down by pressing and holding the **LIGHTS** key.
2. Press and hold the **ENTER/RESET** key and the **LIGHTS** key simultaneously until the display shows "Diagnost".
3. Press the **ENTER/RESET** key once, the display will show "Key Test".
4. Press the **▼** (SCROLL DOWN) key repeatedly to scroll through the menu until the display shows "VERSIONS".
5. Press the **ENTER/RESET** key once to select this function.
6. Press the **▲▼** (SCROLL UP/DOWN) keys will cycle through the following choices:
 - **DISPLAY** - The FFD you are currently using
 - **PILOT** - Hydra/Hercules Pilot Computer Unit
 - **HAL 2000** - Halcyon 2000 Compass
 - **EXP UNIT** - Expansion Unit
 - **NMEA/232** - Hercules Performance Processor
 - **WIND** - Wind PCB
 - **DEPTH** - Depth PCB
7. Press the **ENTER/RESET** key to select your choice. The display will now reveal the following:
 - **Top Half** - System Address Node; e.g. 0060 is node 60
 - **Bottom Half** - Software Version; e.g. 4884 is version 84, i.e. the last two digits
8. Press the **PAGE** key 3 times to exit the test mode.

This concludes the procedure to obtain the software versions.